



TELEMANDO PROGRAMABLE POR PC, SMARTPHONE Y TABLET • 2 EN 1

ES Programación por PC

Descargue, instale e inicie el software de programación de mandos "Made for You". Introduzca las pilas en el alojamiento de la parte posterior del mando.

Conecte el programador IR al puerto USB. Identifique el mando siguiendo las instrucciones que le indica el software.

Elija el tipo de mando, la marca y el modelo. Programe el mando, en unos segundos estará listo para usar.

Programación por smartphone, tablet o PC con cable de audio

Abra un navegador web y diríjase a la dirección www.madeforyouweb.it. Siga las instrucciones que aparecerán en pantalla.

EN PC programming

Download, install and run the programming software "Made for You".

Insert the batteries in the back of the remote.

Connect the IR programmer to the USB port. Identify the command following the instructions given by the software.

Choose the type of control, make and model.

Program the remote, it will be ready in a few seconds.

Smartphone, tablet or PC programming by audio cable

Open your favourite web browser and go to www.madeforyouweb.it. Follow the on-screen instructions.

PT Instruções

Baixar, instale e execute o software de programação "Made for You". Coloque as pilhas no compartimento na parte traseira do controle remoto.

Ligue o controlador ao IR porta USB. Identificar o comando seguindo as instruções que informa ao software.

Escolha o tipo de comando, a marca e modelo. Programar o comando em poucos segundos você está pronto para usar.

Smartphones programação, tablet ou cabo de áudio PC

Abra um navegador da web e ir para a direção www.madeforyouweb.it.

Siga as instruções na tela.

Guía de correspondencia de teclas y funciones del mando

Remote control keys and function matching guide

Teclas de controle remoto e guia de correspondência de funções

LAYOUT KEYS	TV	SHIFT+ TV	SAT/DTT	SHIFT+ SAT/DTT	DVD	SHIFT+ DVD
POWER	POWER ON/OFF	POWER DVD TIMER	POWER ON/OFF	POWER TV TIMER	POWER ON/OFF	POWER TV TIMER
SHIFT						
1	1 ..?		1 ..?	2.1	1 ..?	2.1 DISC 1
2	2 abc		2 abc	2.1	2 abc	DISC 2
3	3 def		3 def	CLOCK	3 def	DISC 3
4	4 ghi		4 ghi	PIP	4 ghi	DISC 4
5	5 jkl		5 jkl	SWAP	5 jkl	DISC 5
6	6 mno		6 mno	TIMER	6 mno	DISC 6
7	7 pqrs		7 pqrs	STORE	7 pqrs	DISC 7
8	8 tuv		8 tuv	STORE	8 tuv	DISC 8
9	9 wxyz		9 wxyz	REVEAL	9 wxyz	DISC 9
GUIDE	GUIDE	I/II SEARCH	GUIDE EPG	SEARCH	GUIDE EPG	SEARCH
0	0	16/9	0	REVEAL	0	DISC 0
SUBTITLE	SUBTITLE	#	SUBTITLE	#	SUBTITLE	#
+ VOL -	+ VOL -	TONE+ TRACK+ TONE- TRACK-	+ VOL -	TONE+ TRACK+ TONE- TRACK-	+ VOL -	TONE+ TRACK+ TONE- TRACK-
SMART	SMART APP NETFLIX HOME	SIZE MEDIA YOUTUBE	MEDIA MODE INTERATTIVI	APP MOVE YOUTUBE	MEDIA MODE INTERNET	SIZE MEDIA YOUTUBE
MENU	MENU HOME MODE RDS	Q.MENU MEDIA	MENU HOME MODE RDS	Q.MENU MEDIA	MENU HOME MODE RDS	Q.MENU MEDIA
		PAGE+ INDEX+ PAGE- INDEX-		PAGE+ INDEX+ PAGE- INDEX-		TONE+ ECHO+ TONE- ECHO-
	MUTE AUDIO OFF	SURROUND AUDIO SOUND		MUTE AUDIO OFF	SURROUND AUDIO SOUND	
NETFLIX	NETFLIX TXT SLEEP	SLEEP DISPLAY	NETFLIX TXT FAVORITE	SLEEP DISPLAY	FREEZE TIMER	SLEEP DISPLAY

LAYOUT KEYS	TV	SHIFT+ TV	SAT/DTT	SHIFT+ SAT/DTT	DVD	SHIFT+ DVD
	YouTube @TV DISPLAY	PICTURE 3D VIDEO DTV	SAT TV/RADIO TV DISPLAY	PICTURE VIDEO	TV TV/RADIO HDD DVD	PICTURE VIDEO 3D
prime video LISTE	LANGUAGE TITLE FAVORITE	LISTE prime video TIMER PROG	LANGUAGE TITLE FAVORITE	LANGUAGE TIMER PROG	LANGUAGE TITLE FAVORITE	LANGUAGE TIMER PROG
TOOLS	TOOLS ASPECT SYSTEM OPTION	SETUP SERVICE BOOKMARK	TOOLS HELP USB OPTION	SETUP SERVICE BOOKMARK	TOOLS ASPECT USB HDD	SETUP GO-TO WIDE MARK
INFO	INFO INDEX DISPLAY SEARCH	DISPLAY STATUS S.MODE PVR	INFO INDEX INTRO SEARCH	DISPLAY STATUS S.MODE PVR	INFO INDEX CLEAR SEARCH	CLEAR STATUS S.MODE PVR
	▲ UP	FAV+ PAGE+	▲ UP	FAV+ PAGE+	▲ UP	TUNE+ PAGE+
	◀ LEFT	INDEX-TUNE-	◀ LEFT	INDEX-TUNE-	◀ LEFT	INDEX-TUNE-
	▶ RIGHT	INDEX+ TUNE+	▶ RIGHT	INDEX+ TUNE+	▶ RIGHT	INDEX+ TUNE+
	▼ DOWN	FAV- PAGE-	▼ DOWN	FAV- PAGE-	▼ DOWN	TUNE- PAGE-
OK	OK NORM ENTER	ZOOM NORM ENTER	OK ENTER	ZOOM ENTER	OK PLAY ENTER	ZOOM SLOW ENTER
RETURN	RETURN BACK PROG. PREV	RECALL REPLAY	RETURN BACK RECALL	RECALL REPLAY	RETURN BACK RECALL REPEAT	REPEAT REPEAT A-B
EXIT	EXIT RETURN	RESET DELETE	EXIT RETURN	RESET DELETE	EXIT RECALL RETURN	RESET REPEAT A-B
	RED	SIZE STILL SWAP PIP	RED	SIZE SCAN SWAP ADD	RED	SIZE GAME SWAP A-B
	GREEN	WEST NOTE	GREEN	WEST NOTE	GREEN	WEST NOTE
	YELLOW	3D SIZE HELP	YELLOW	3D SIZE HELP	YELLOW	3D MARK ERASE
	BLUE	STORE ADD WIDE	BLUE	HDD ADD WIDE	BLUE	HDD ADD KEY
	◀◀ REWIND PREVIOUS	◀◀ PREV SLOW	◀◀ REWIND PREVIOUS	◀◀ PREV SLOW	◀◀ REWIND PREVIOUS	◀◀ PREV SLOW
	⏸ PAUSE AUDIO	SLOW SOUND	⏸ PAUSE AUDIO	SLOW SOUND	⏸ PAUSE AUDIO	SLOW SOUND
	▶ PLAY	▶ SLOW	▶ PLAY	▶ SLOW	▶ PLAY	▶ SLOW
	▶▶ NEXT FORWARD	▶▶ NEXT SLOW	▶▶ NEXT FORWARD	▶▶ NEXT SLOW	▶▶ NEXT FORWARD	▶▶ NEXT SLOW
	● RECORD	TIMER RECORD	● RECORD	TIMER RECORD	● RECORD	TIMER RECORD
	■ STOP	STOP 2 IMAGE	■ STOP	STOP 2 IMAGE	■ STOP	STOP 2 IMAGE
	SOURCE TV/AV SCART	USB HDMI EJECT	SKY USB SAT	HDMI AUX RADIO HDD	▲ EJECT USB OPEN/CLOSE	HDMI AUX RADIO HDD